



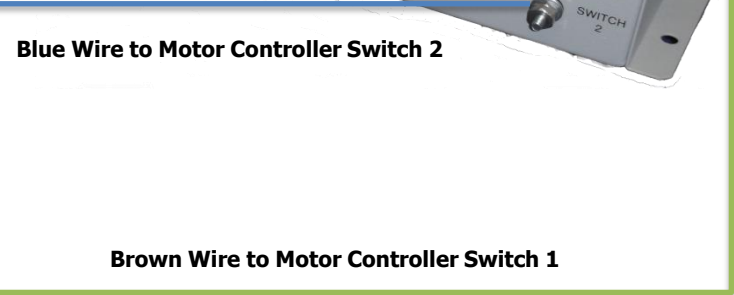

J01-3 Wireless Joystick

All units are pre-programmed. The top two buttons control your single unit or your bow thruster for sets.

The remote has a built in time-out of approximately 4 minutes

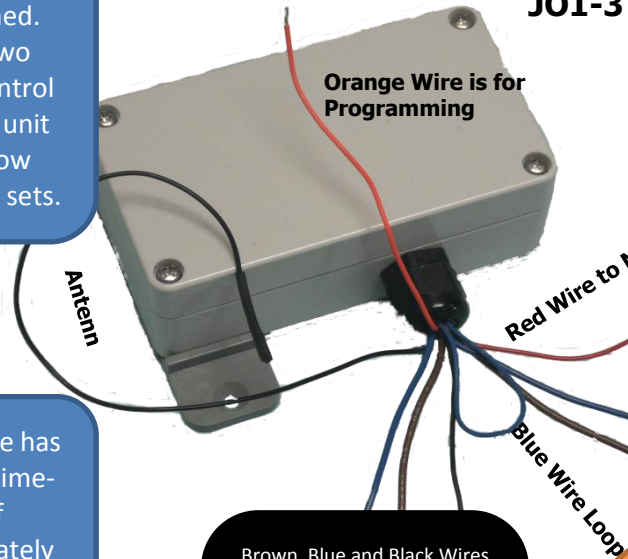

Brown, Blue and Black Wires to Common Ground

To Turn ON
Press and hold the top 2 buttons simultaneously for 4 seconds, then operate by pressing left or right arrows.

To Turn OFF
Press the two bottom buttons simultaneously.



To Program Remote to Receiver:

- *Turn Unit ON
- *Attach a lead from the Receiver's orange programming wire to Motor Controller Battery Positive
- *Press any button on the remote and for one second then release
- *Disconnect lead from orange programming wire and Motor Controller Battery Positive
- *Turn on Unit

To Clear All Programming From Receiver :

- *Turn unit ON
- *Attach a lead from the Receiver's orange programming wire to Motor Controller Battery Positive
- *Push the top left and the bottom right buttons on the remote simultaneously for one second
- *Disconnect lead from orange programming wire and Motor Controller Battery Positive